


#13A ALUMINUM PONTON RACK

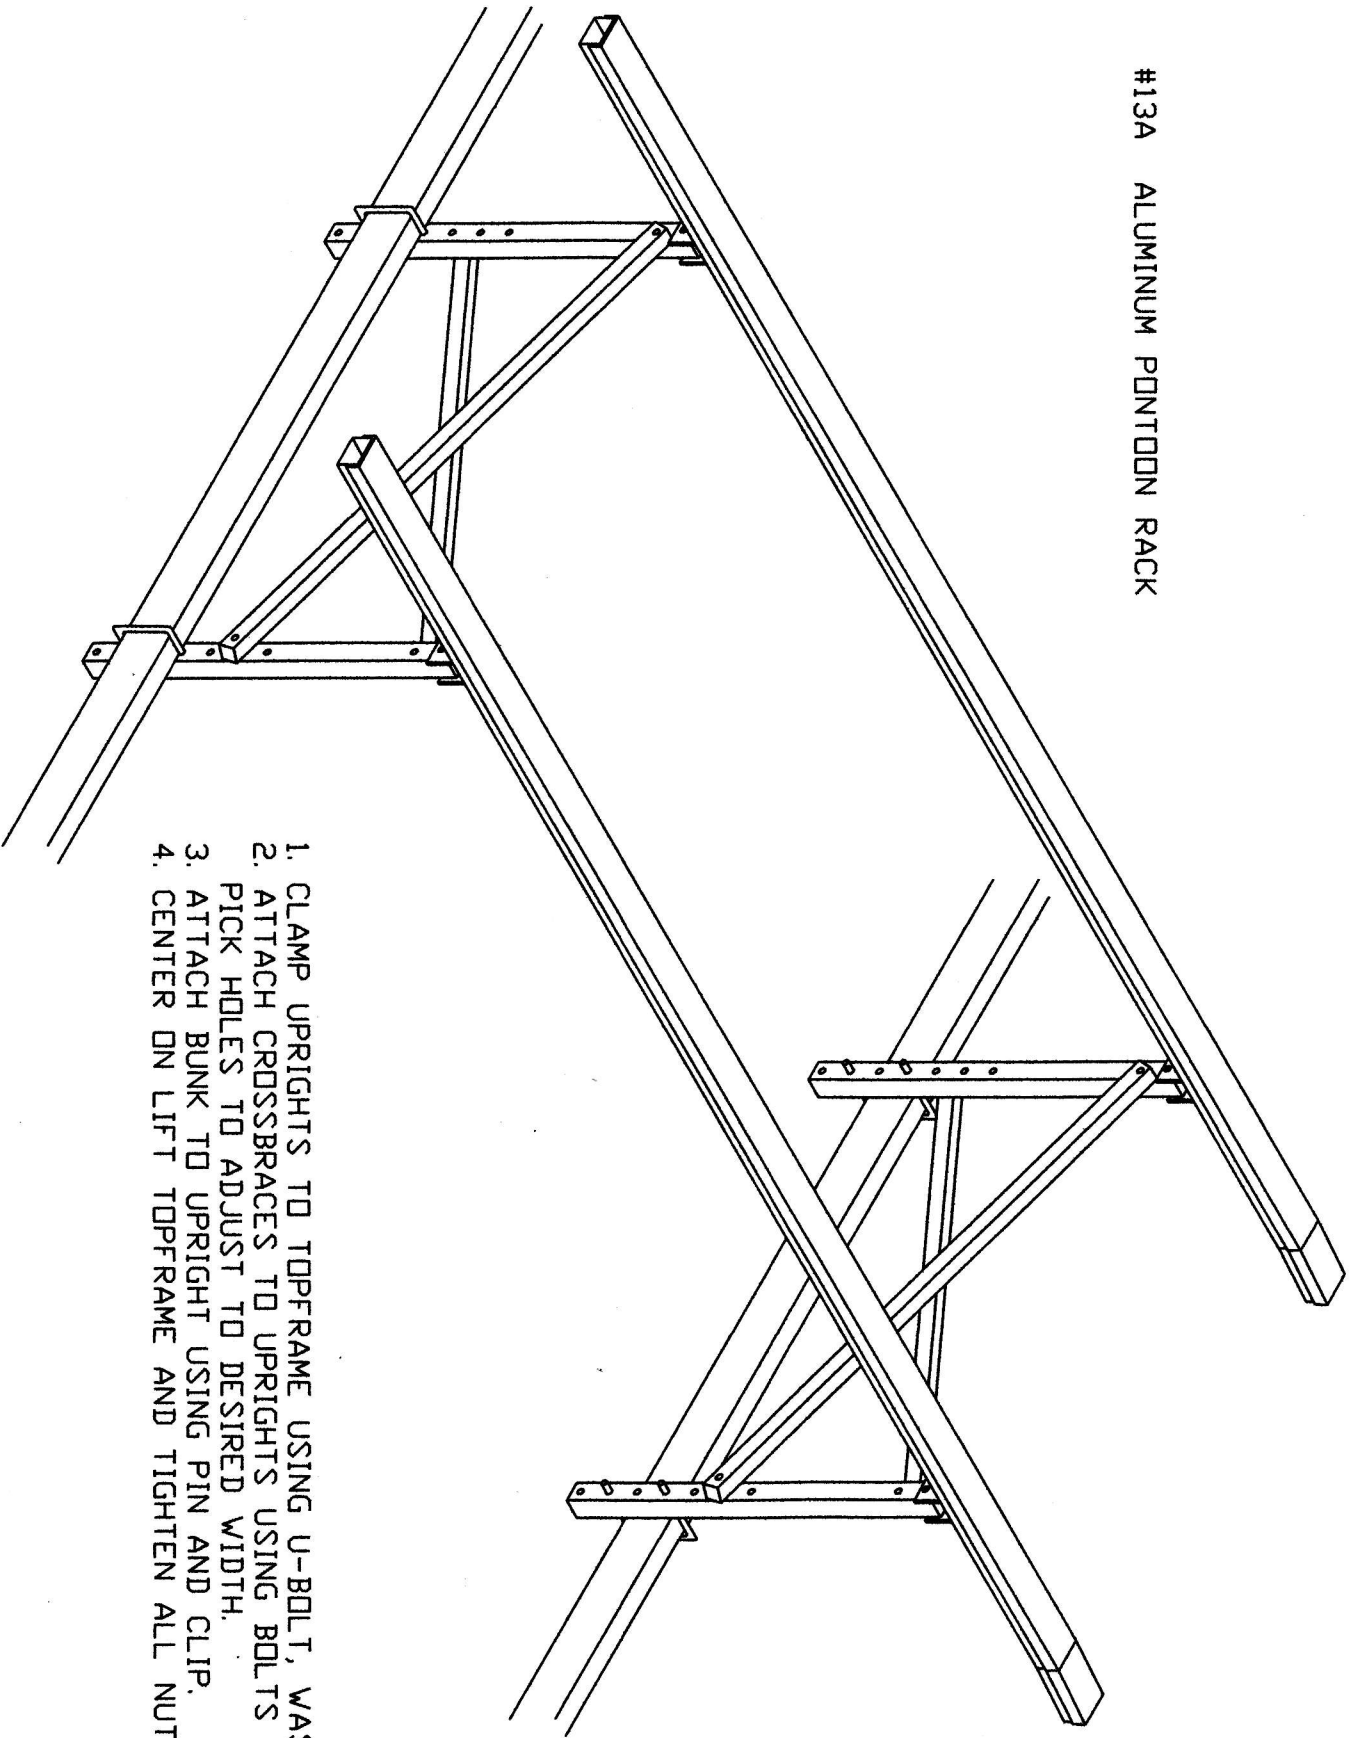

1. CLAMP UPRIGHTS TO TOPFRAME USING U-BOLT, WASHERS, NUTS
2. ATTACH CROSSBRACES TO UPRIGHTS USING BOLTS AND NUTS, PICK HOLES TO ADJUST TO DESIRED WIDTH.
3. ATTACH BUNK TO UPRIGHT USING PIN AND CLIP.
4. CENTER ON LIFT TOPFRAME AND TIGHTEN ALL NUTS SECURELY.